For more information, please visit
www.singmaxx.com

XCUBE Technology Inc.
7F, 48 Lane 188 Ruiguang Road.
Neihu District, Taipei, 114 Taiwan
Phone: +886 2 2799 0709
Fax: +886 2 2659 8070
Email: support@xcube.cc
Website: www.xcube.cc

© 2008 Copyright Reserved
XCUBE TECHNOLOGY INC
Printed in Taiwan

SingMaxx 520

User Manual

English

NOTICE

Please note that separate permanent written records are kept for all important data. Data may be lost or altered in virtually any electronic memory product due to different circumstances. We assume no responsibility for data lost or otherwise rendered unusable as a result of improper use, repairs, defects, battery replacement or any other cause. Therefore, we assume no responsibility, directly or indirectly, for financial losses or claims from third parties resulting from the use of this product or any of its functions.

The information provided in this manual is subject to change without notice.

CAUTION

- **!** Please do not disconnect the Player from the computer during reading or writing, or else it may cause data loss.
- **!** Please use the USB interface at the back of the host computer (the USB interface at the front of the host computer may be fitted with low power ports. Extended and/or improper use, can cause an insufficient supply of power, which may cause the USB equipment to malfunction.
- **!** If the disk cannot be found or the folders or files cannot be viewed, please format the disk when connected to the computer.
- **!** Do not drop the Player or apply excessive force to it.
- **!** Do not subject the Player to extreme temperatures. Since the product is not waterproof, do not use it or store it where fluids can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause malfunction.
- **!** Clean only with a soft, dry cloth.

WARNING

- **! NEVER dismantle, repair, or rebuild the player. It may cause player damage without warranty.**

CONTENTS

Chapter 1: Before Starting

1.1 Contents

1.2 Control Buttons and Definitions

1.2.1 Location of Control Buttons

1.2.2 Definition of Control Buttons

1.3 Connecting to other Devices

1.3.1 Connecting to PC & Inserting Micro SD Card

1.3.2 Connecting to Headphone or Speaker

1.3.3 Connecting to TV

1.3.4 Connecting to TV & Stereo System

1.4 Installing Software

1.4.1 Installing MP4 Maker

1.4.2 Installing Windows Media Player 10/11

Chapter 2: Basic Operations

2.1 Turning on/off the Player

2.2 Submenu Key

2.3 Copying Files/Folders to the Player

2.4 Connecting to TVs & Stereos

2.5 Connecting to Microphones

2.6 Holding the Player

2.7 Battery Charging

2.8 Resetting

Chapter 3: Using SingMaxx 520

3.1 Karaoke

3.1.1 Adding Music or Videos to the Player

3.1.2 Putting Music or Video into a Playlist

3.1.3 Parameter Settings

3.1.4 Singing Songs

3.2 Music

3.2.1 Music Playback

3.2.2 Basic Operations

3.2.3 Parameter Adjustment

3.2.4 Other
3.3 Photo
3.3.1 Basic Operations
3.3.2 Slide Show settings
3.3.3 Wallpaper Settings
3.4 Video
3.4.1 Locating the Video
3.4.2 Basic Operations
3.4.3 Add videos to Karaoke
3.5 Game
3.5.1 Playing Games
3.5.2 Exit the Game
3.5.3 Other Controls
3.6 Recording
3.7 Folder
Chapter 4: Player Settings
4.1 USB Mode
4.2 Language
4.3 Output Mode
4.4 Backlight Time
4.5 Power Off Time
4.6 Load Default
4.7 Customize EQ
4.8 System Information
Chapter 5: Other
5.1 Submenus
5.2 Using MP4 Maker to convert video formats
5.3 Using Windows Media Player 10/11
5.4 Low Battery
5.5 Certifications, Liability, and Trademarks
5.6 Troubleshooting

Chapter 1: BEFORE START

Warning:
! The player requires Windows 98/2000/ME/XP or above operating system.

! Windows Media Player WMP 10/11 requires Windows XP or above operating system. Go to the Microsoft official website to update the program.

1.1 Contents

Basic Package (Package A) Including:

- SingMaxx 520 Main Set
- CD-ROM Software
- User Manual
- USB 2.0 Cable
- Carrying Bag
- Earphones
- Power Adapter

Optional Accessories

- AV Cable SA-221
- Mini Microphones SA-231
- Microphones SA-232

Package B Including:

- All contents of package A
- AV Cable SA-221

Package C Including:

- All contents of package A
- AV Cable SA-221
- Mini Microphones SA-231

Package D Including:

- All contents of package A
- AV Cable SA-221
- Microphones SA-232

1.2 Control Buttons and Definitions

1.2.1 Location of Control Buttons

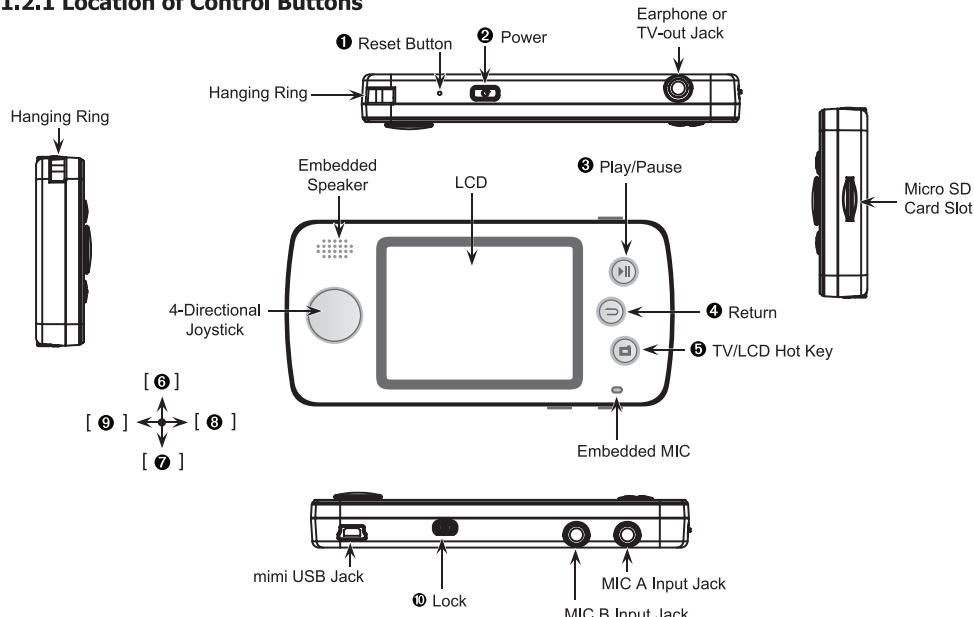

1.2.2 Definition of Control Buttons

Item	Button	Definition When to Use
①		**Reset** System Reset, used when the player get stuck
②		**Power/Submenu** Power on/off (when in main menu) Submenu (when not in main menu)
③		**Play/Pause** Play or Pause
④		**Return** Return to Previous Page
⑤		**TV** Switch Hot Key Between TV and LCD
⑥		**Up** Move Cursor Up
⑦		**Down** Move Cursor Down
⑧		**Right** Move Cursor Right, Playback
⑨		**Left** Move Cursor Left
⑩		**Lock Switch** Shut Down Player After Power Off Right Hand Side: ON Left Hand Side: OFF

1.3 Connecting to Other Devices

1.3.1 Connecting to PC & Inserting Micro SD Card

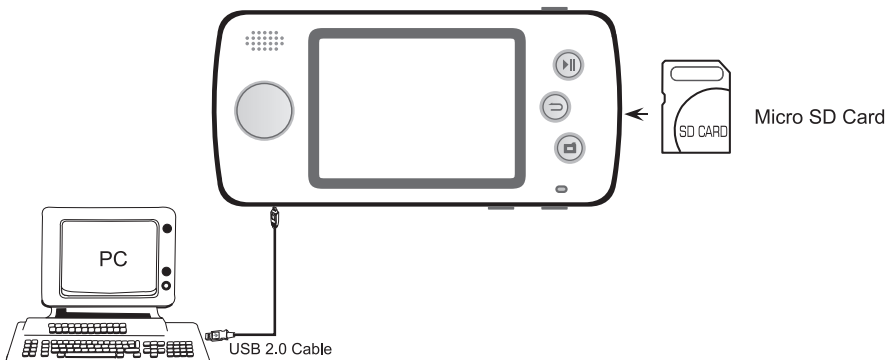

1.3.2 Connecting to Headphone or Speaker

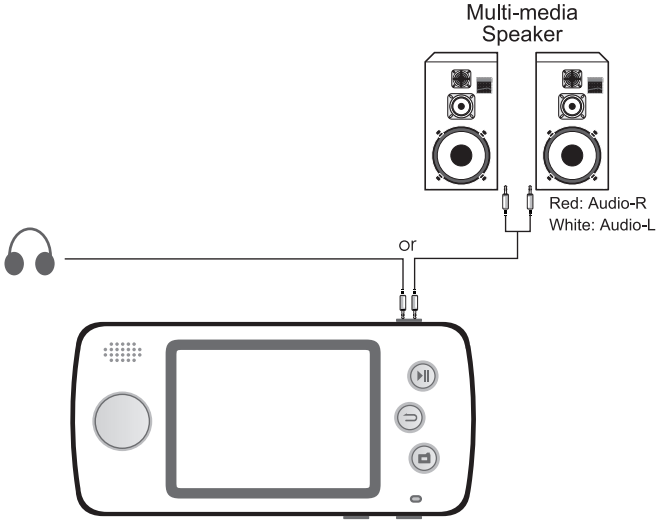

1.3.3 Connecting to TV

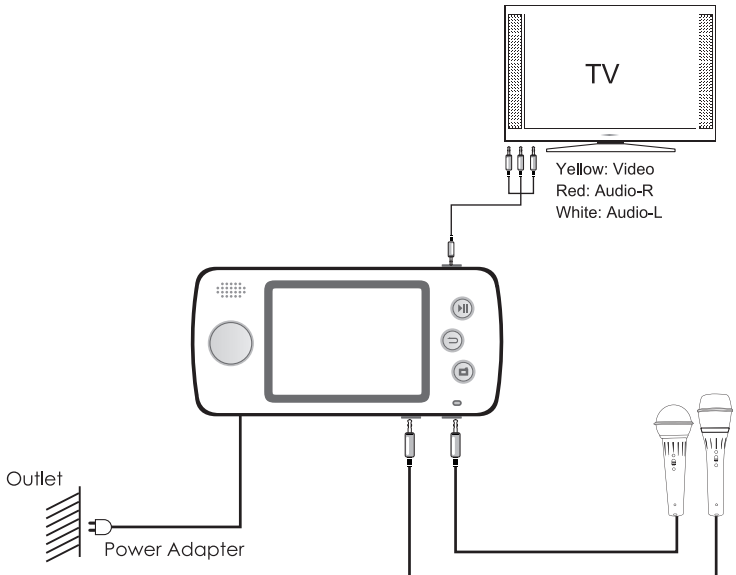

1.3.4 Connecting to TV & Stereo System

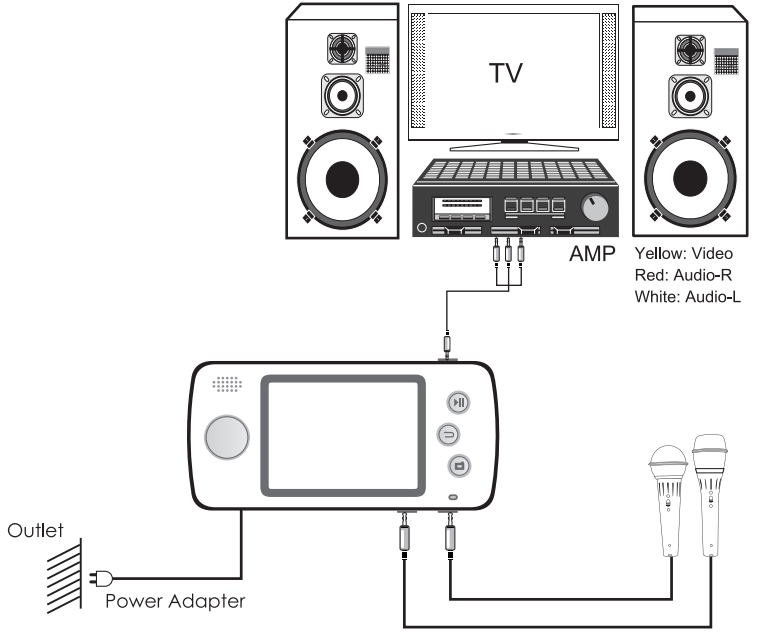

1.4 Installing Software

1.4.1 Installing MP4 Maker

1. Insert the installation CD into your computer to display the installation process screen
2. Select and double click MP4 Maker to complete the installation process following the onscreen instructions

NOTE:

Minimum system requirements for using MP4 Maker

- Windows 98 SE/ME/2000/XP and above
- 64MB or greater memory
- 30MB or greater hard disk space

1.4.2 Installing Windows Media Player (WMP) 10/11

1. Insert the installation CD into your computer to display the installation process screen
2. Select and double click WMP 10 to complete the installation process following the onscreen instructions

NOTE:

1. The installation CD only provides the WMP10 program, please visit the Microsoft website for WMP11 download and installation
2. Minimum system requirements for using WMP10
   - Windows XP or above
   - 64MB or greater memory
   - 30MB or greater hard disk space
3. For more information on using Windows Media Player 10/11, refer to Chapter 5.3
4. To connect the player to Windows Media Player, select Setting > USB Mode > MTP Mode and press ⏯

Chapter 2: BASIC OPERATIONS

2.1 Turning on/off the Player

ALWAYS use ⏻ to turn on/off the player.
USE Lock Switch to lock the player after power off.

Power on: Press the ⏻ button on the player

Power off: Press the ⏻ button for 5 seconds until the power-off signal appears.

Note:
1. The power can be turned off only when the player is in main Menu.
2. Turn the Lock switch to left-hand (off) side after power off for safety.

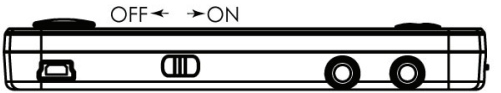

Warning:
NEVER turn the Lock switch off when the player is still on. It may cause system failure.

2.2 Submenu Key

The ⏻ button will become to submenu key when the player is not in main menu. Press ⏻ button, the submenu bar will appear when the player is not in the main menu.

2.3 Copying Files/Folders to the Player

There are two ways to add music, videos, photos and other files to the folder in the player; through the file folders in Windows (Setting>USB Mode>Mass Storage) or through Windows media player 10 and above (Setting>USB Mode>MTP Device).

When Windows recognizes the player it will assign a drive letter. Open the drive. Files can be dragged and dropped or copied and pasted into the MEDIA folder of the player.

This is the mass storage mode (hard drive MSC mode). When shut down and disconnected from the computer it automatically organizes files. Lyrics files (CDG format and LRC format) with the same name as music files stored in the LRC folder (Xdata>LRC) will synchronize lyrics on the screen with the music to be played.

The second method is to add files using Windows Media Player 10 or above. In Windows Media Player choose the left tab copy to CD or Device. Songs, photos or videos can then be dragged or copied to the player. Album art work can also be added to be displayed on the player screen when playing the song.

The player can access files from Micro SD cards inserted in the media port on the side of the player. Files can be accessed through the Folder menu.

Follow the following procedures on copying files/folders

1. Choose MTP device or Mass Storage (Default) first through Setting>USB Mode> MTP device (or Mass Storage)

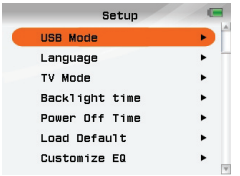

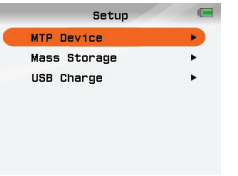

2. Connect the player to your computer using the USB 2.0 cable. The LCD will display the connection mode.

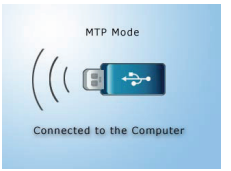

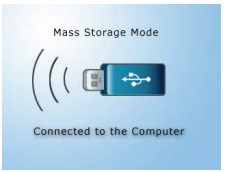

3. Click on the dialogue column displayed on the computer screen.
4. After selecting a file or folder in your computer, drag and drop it into the drive for the player (Windows will assign a drive letter).
5. Use the right mouse button and select Delete to remove a file or folder.
6. Unplug the USB cable and the files will synchronize automatically.

Note:

1. When you are transferring data using the USB cable, NEVER disconnect it or turn off the player; data may be lost or the player could be damaged.
2. NEVER delete the system folder, it may cause system malfunction.
3. Always put media files or folders under Media folder.

4. Always put LRC and CDG files under Xdata>LRC folder.
5. Always put GBC files under Xdata>GBC folder
6. Always put NES files under Xdata>NES folder

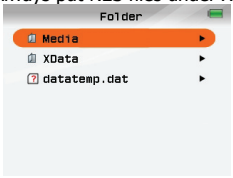

2.4 Connecting to TVs & Stereos

The player is equipped with an AV-out interface.

1. Plug the 3.5mm connector of the AV cable (SA-221) into the AV-out jack and connect to a TV or Stereo with the other end.
2. When the player is on, press the button for 3 seconds and then release. The signal will go on the TV.
3. Press the button again to switch back to LCD display.
4. Please also refer to chapter 1.3 Connecting to Other Devices for detail connection configuration.

Note:

1. Always connect to the video input with the yellow connector, audio-right input with the red connector, and audio-left with the white connector.
2. Using SingMaxx SA-221 standard AV cable is recommended. Other vendor's AV cables may NOT work properly because of different configuration.

Warning:

Display switch between TV and LCD is NOT allowed when playback video file.

2.5 Connecting to Microphones

There is an embedded MIC input in front of the player and two microphone (MIC-A, MIC-B) input jacks in the bottom of the player.

The embedded MIC can be used for voice recording or karaoke singing. It does not have the echo function when singing.

MIC-A and MIC-B allow a microphone with a 3.5mm connector to connect and sing in duet.

Note:

1. To obtain higher quality, SA-231 / SA-232 uni-directional, dynamic microphones are recommended.
2. Always connecting the microphone into the player before playback the karaoke song, or it may cause a noisy echo sound.

2.6 Holding the Player

The player uses the software hold function.

Press the button when the player is on, choose Lock and then press to hold the player.

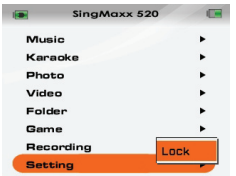

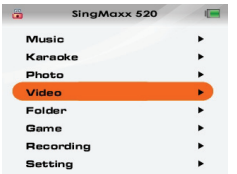

Unlock the player:

Press the button again, choose Unlock and then press to release the player.

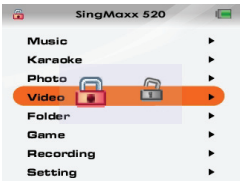

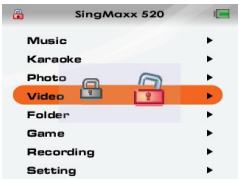

2.7 Battery Charging

There are two ways to charge the battery.

Use USB 2.0 Cable

1. Use the USB cable to connect to your computer when the player is off. "Charge done!" will appear when the player is charged fully.
2. When the player is on, set Setting>USB Mode>USB Charge. Then use the USB cable to connect to your computer to charge when you are using the player.

Use Power adapter

1. Use the power adapter to connect to a power outlet when the player is off. Charge the player until "Charge done!" is shown.
2. Use the power adapter to connect to a power outlet when using the player.

Battery Status Indication

	Will be shown on the screen when charging during using the player
	100% power
	60% power
	30% power
	10% power, need to charge as soon as possible

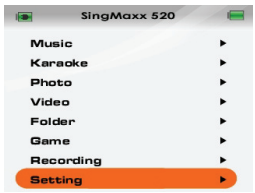

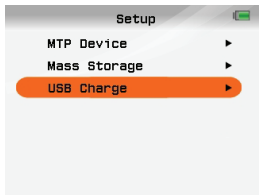

Note:

1. DO NOT use any other USB cable or USB power adapter not provided with the product. It may cause a malfunction.
2. While your computer is in standby mode, the product may not be charged.
3. Charge the product ONLY at room temperature. The product may not be charged in extremely hot or cold conditions.
4. Check if the product is connected to a high power USB 2.0 port. Some low power USB ports may not provide enough power to charge the product.
5. Normally it will take 3 hours to fully charge the player based on power off status. It will take a longer time to fully charge if the player is being used.

2.8 Reset

You may apply the reset function by inserting a pointed object into the Reset button.

Only use if the player is malfunctioning, cannot be powered off, and/or will not work properly.

Chapter 3: USING SINGMAXX 520

3.1 Karaoke

This application allows vocal removal, echo control, pitch shift or suppression of songs or videos.

The player supports

AVI format videos and
MP3+G (CDG) format music.

Add Karaoke songs to the Player Folder

Put MP3+G or Karaoke Video files under "Media" folder.
Put MP3+G Lyric files under "Xdata>LRC" folder.

For example:
SongABC.mp3 saved under Media folder
SongABC.cdg (lyric file) saved under Xdata>LRC folder

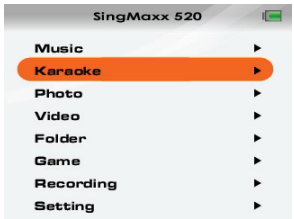

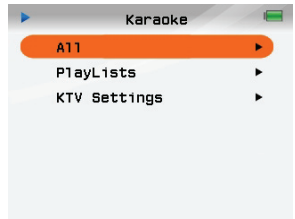

3.1.1 Adding Music or Videos to the Player

There are two ways to load media into a karaoke playlist.

Adding MP3/MP3+G songs into Karaoke folder

1. Enter Music folder, choose the song or album from the list.
2. Press ⟲ button after the song/album is chosen.
3. Choose "To Karaoke" (default) from sub-menu bar and press ⏯ button to confirm it.
4. Keep to choose other songs from the list.

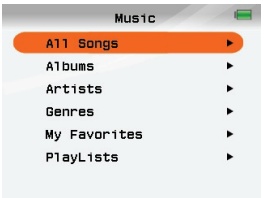

Adding Videos into Karaoke folder

1. Enter Video folder, choose the video from the "All " list or by "Search by Title ".
2. Press ⟲ button after the video is chosen.
3. Choose "To Karaoke" (default) from sub-menu bar and press ⏯ button to confirm it.

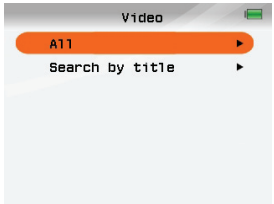

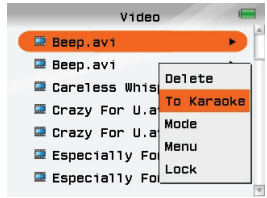

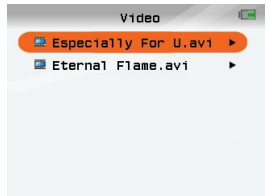

Note:

1. All Karaoke videos have to convert to 320x240 pixels AVI format through MP4 Maker (refer to Chapter 5.2) before copy to the player.
2. The player supports MP3 format (.mp3) songs ONLY for karaoke playback.
3. For karaoke music and video contents, contact the local dealers or on-line stores.

3.1.2 Putting Music or Video into a Playlist

Songs/Videos added to karaoke>All will be saved for later subsequent use.

Songs organized into the karaoke>Playlist will be cleared after restarting. This playlist allows for single use setup.

Sing Karaoke songs either in the Karaoke>All folder or Karaoke>Playlist folder

1. Enter the Karaoke>All and playback the karaoke songs by press ⏯
2. Press ⟳ to add one song/video or all songs/videos to Karaoke>Playlist and playback the list in Playlist if you prefer the single use setup.

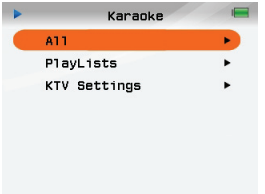

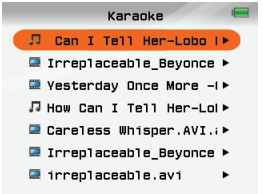

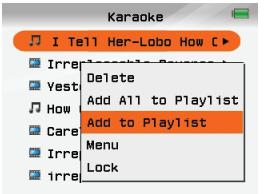

3.1.3 Parameter settings

Settings for the karaoke mode can be altered prior playing music or during play. Preferences can be set for individual songs.

The Settings include:

- Vocal remove: on / off
- Echo gain: 1 ~ 8
- Echo depth: 1 ~ 8
- Pitch shift: -5 ~ +5
- Channel suppression: right, both, left
- MIC volume: 0 ~ 9
- Slide Setting: on / off (put on to choose photo slide show during MP3 Music singing)

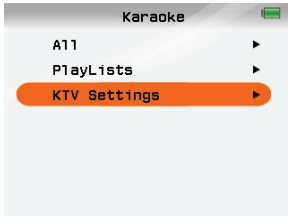

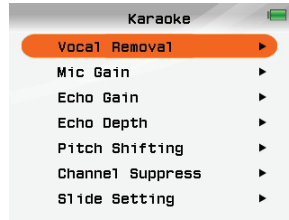

Pre-setting

1. Enter Karaoke>KTV Settings
2. Select the parameters and set accordingly

Setting during singing

1. Press button during singing
2. The Vocal Remove: On (or Off) will appear at upper side of screen
3. Press or to set the parameter
4. Keep press the button and the other setting will appear sequentially.

3.1.4 Singing Songs

1. The master volume can be increased or decreased by pressing or .
2. Press to skip the singing song
3. The default setting is for the player to enter photo slide show when MP3 songs are playing
4. There is two connections for microphones
5. To access a TV it is necessary to press the button for 3 seconds. The signal will be sent to the TV. Holding it again for 3 seconds will return the signal to the player.

Note:
Set up the TV connection with AV cable and microphones plug into the player first. Use our SA-221 standard 15-feet AV Cable is suggested.

3.2 Music

This player supports MP3, WMA, and WAV format.

3.2.1 Music Playback

1. Select Music mode in the main menu and press ⏯ or ⭘
2. Choose a song from All Songs or Albums or Artists or Genres or My Favorite or Playlists and press ⏯ or ⭘
3. After locating the song, press ⏯ to playback and press ⏯ again to pause the song.

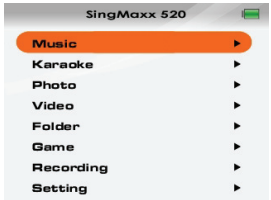

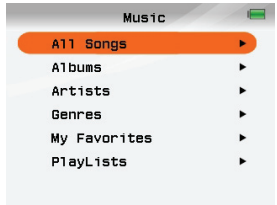

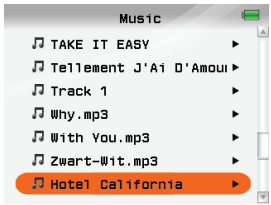

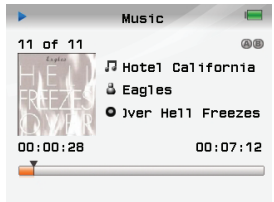

3.2.2 Basic Operations

Pause: press ⏯ when playing

FF (Fast Forward): keep pressing ⏭

FR (Fast Rewind): keep pressing ⏮

Previous song: press ⏮

Next song: press ⏭

3.2.3 Parameter Adjustment

When the player is in music playing screen,

Volume Adjustment

1. Press the ⏫, the volume bar will appear in the right side of LCD display
2. Press ⏫ or ⏬ to adjust volume
3. Press ⏯ to return

Mode Adjustment

1. Press the ⏫ and then ⏭, the mode bar will appear in the right side of LCD display
2. Press ⏫ or ⏬ to choose the mode
3. Five modes are available: Single, Single Repeat, All, Repeat All, and Shuffle.
4. Press ⏯ to exit the mode selection

EQ Adjustment

1. Press the ⏫ and then ⏭ twice, the EQ bar will appear in the

right side of LCD display

2. Press or to choose the EQ mode
3. Seven modes are available: Normal, POP, Rock, Jazz, Classical, Bass, and Customize
4. Press to return

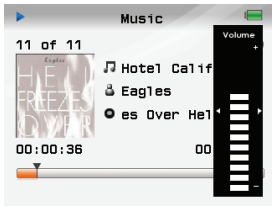

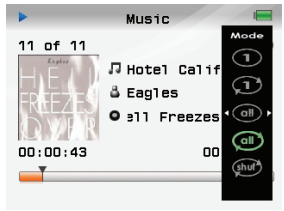

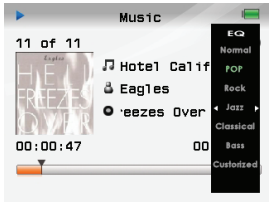

3.2.4 Other

Submenu Options 1

Press when the player is in the music mode, the submenu bar will appear in the right side of LCD display

Choose Delete, To MyFavorites, To Karaoke, Menu, and Lock by using or

Delete Songs

1. Locate the song that you want to delete and press button, the submenu bar will appear in the right side of LCD
2. Use or to choose [Delete] and then press to exit

Add favorite Songs to Favorite

1. Locate the favorite song and press button, the submenu bar will appear in the right side of LCD.
2. Use or to choose [To MyFavorites] and then press to confirm and exit

Add Songs to Karaoke

1. Locate the song and press button, the submenu bar will appear in the right side of LCD
2. Use or to choose [To Karaoke] and then press to exit

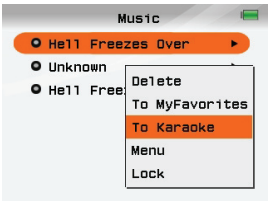

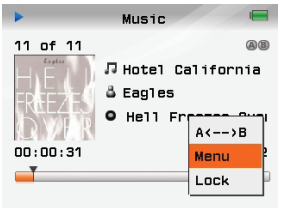

Submenu options 2

A-B repeat

1. Press when the player is in the music playing mode, the submenu bar will appear in the right side of LCD
2. Press or to choose the A-B repeat mode, Press and A-B repeat will show on the screen

Lock

1. To hold the screen of player, press when the player is in the music playing mode and the submenu bar will appear in the right side of LCD
2. Press or and choose the Lock mode, press and Lock t will show on the screen.

3.3 Photo

This is the photo viewer application. Photos can be viewed directly or in a slide show. The player supports JPEG format and high pixel photos from digital cameras. Photos can be sorted by date automatically after synchronization.

You can view photos while listening music.

3.3.1 Basic Operations

1. Entering Photo mode, the photos will list in all or sorted by date (year / month)
2. Choose the folder which you want to view, press ⏭ or ⏯ and the photos will display in 25 (5x5) thumbnail preview mode
3. Choose any one to start the slide show by press ⏯
4. Press ⏯ to toggle between slide show and manual mode
5. Manual or Slide mode will indicate at the bottom of LCD display

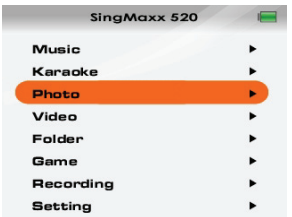

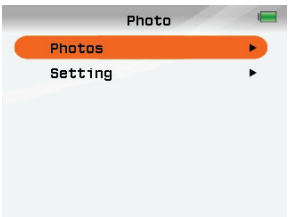

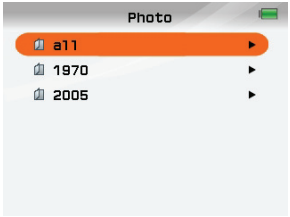

Next photo: press

Previous photo: press

Photo rotation: press to rotate the photo clockwise

Back to thumbnail preview mode: press

3.3.2 Slide Show Settings

1. Choose Setting mode by press or
2. Entering Slide setting by press or and choose manual or 3 / 5 / 10 / 15 / 20 seconds
3. Entering Repeat Setting by press or and choose ON or OFF

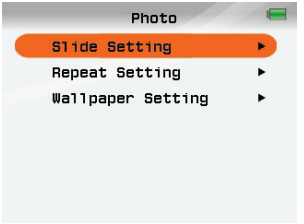

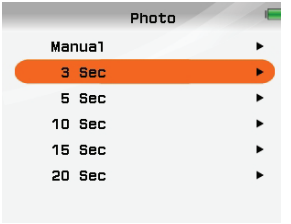

3.3.3 Wallpaper Settings

1. Locate your favorite photo in the thumbnail preview mode by using Joystick and press ⟳ the submenu will appear in the right side of LCD display
2. Choose [Set BG(H)] and press ⏯. Wait for 3~5 seconds and the wallpaper will change to new chosen photo.

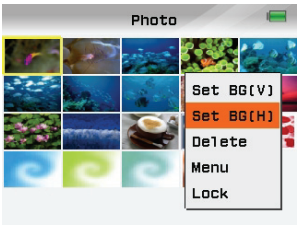

3.4 Video

The player only supports 320x240 pixels AVI format, other formats require conversion to AVI format with the MP4 Maker management tool.

3.4.1 Locating the Video

1. Choose All or Search by title to locate the video
2. All videos will be listed in alpha (0~9, A~Z) when you enter the Search by title
3. Press ⏯ to playback the video

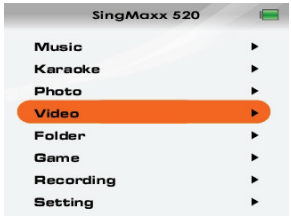

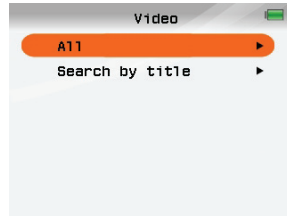

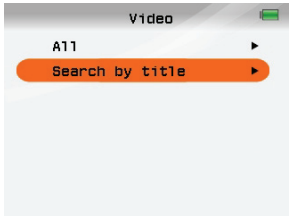

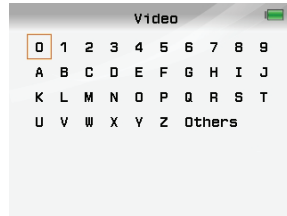

3.4.2 Basic operations

Volume control:	press ▲ first and using ▲ or ▼ to adjust the volume
FF (Fast Forward):	pressing ▶
FR (Fast Rewind):	keep pressing ◀
Pause:	press ⏯ when playback
Skip:	press ↵

3.4.3 Add Videos to Karaoke

1. Choose All or Search by title to locate the video
2. Press ↻ and the submenu bar will appear at the right side of LCD display
3. Use ▲ or ▼ and choose To Karaoke, press ⏯ and exit

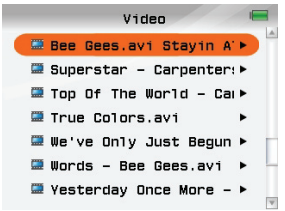

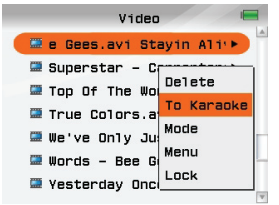

3.5 Game

Download the games from your computer or the Internet to the player. It supports GBC, NES and LUA formats, and can store them to related folders. GBC and NES folders belong to the system. If you delete them, the player will malfunction.

The player has Magic Cube, Gobang, Bomb, Tetris, Bee and Car Race, which are stored in the LUA folder.

Warning:
ONLY use the legal games. User is responsible for the game downloaded from Internet.

3.5.1 Playing games

1. Select the game from the folder, then press ⏯
2. Press ⏯ to confirm the selection
3. Use the 4-direction joystick for going up, down, right, and left
4. Use ⏯ for jumping if program needed

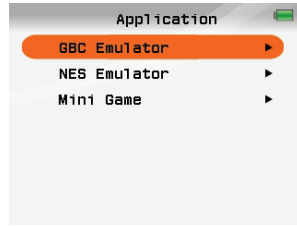

3.5.2 Exit the Game

Press both and , choose Quit and press to exit the game

3.5.3 Other Controls

Press both and

The screen will show the options for

- Quit
- Mute
- Volume
- Brightness
- Return

2. Use and to locate the options
3. Use and to adjust the Volume and Brightness

3.6 Recording

This is the recording application mode, it supports WAV format.
You can set the desired sample rate, which includes 44.1K, 32K and 16K.

Basic Operations

Recording: Choose Recording and press ⏯

Pause: Press ⏯ when recording

Return: Press ⮌ and go back to previous menu

Listen to Recording files: Enter the Recording File List and choose the file and press ⏯ to playback

Volume Adjustment: Press 🔼 and use 🔼 or 🔽 to adjust the volume

Note:

1. Please make sure that the battery has enough power before recording.
2. The recorded file will be saved in the Recoding>Recording File List.

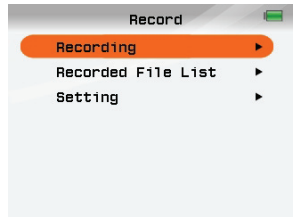

Record
Record to File
MIC051808_0001.wav
File Size: 18Kbytes
00:00:02

Record
Record to File
MIC051808_0002.wav
File Size: 74Kbytes
00:00:09

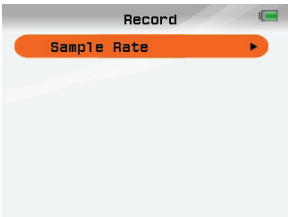
Record
Sample Rate

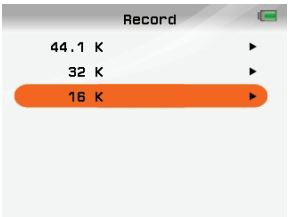
Record
44.1 K
32 K
16 K

3.7 Folder

All the files stored in this player, including music, videos, photos, words and other materials, are from the USB device.

Select desired folder, then press ⏯ to open or to view the file.

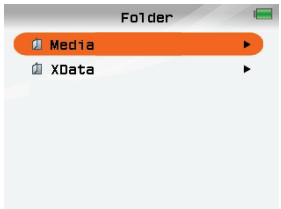

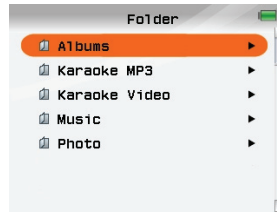

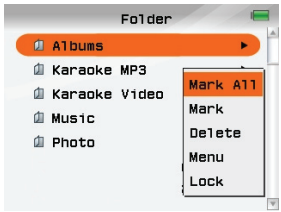

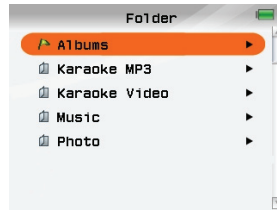

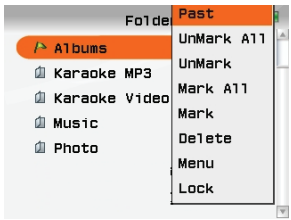

Chapter 4: SETTINGS

4.1 USB Mode

This item must be set before connecting to the computer. There are three modes selection.

MTP Mode
When connecting to a computer, it is possible to upload or download data by using Windows Media Player 10 (or above) to synchronize the music/video/photo files. This mode is only used in the Windows XP system (or above).

Before synchronization, please set the player to MTP Device. Use a USB 2.0 cable to connect the player to the computer. Open Windows Media Player 10 or above, then synchronize music/video/photo to the player, or download the data to the DATA folder.

Mass Storage (MSC) Mode
When connecting to a computer, it is possible to upload or download data by using mass storage mode. This mode is only used in the Windows 98/2000/ME/XP system (or above).

Please set the player to Mass Storage. Use a USB 2.0 cable to connect the player to the computer. Open files management system and put the music/video/photo/others files to the player.

The player will perform automatic synchronization after unplugging the USB cable. It will allow all the downloaded files to be synchronized into database system.

USB Charging Mode:

The player can be charged in a computer with any system, for charging only, however it is not possible to upload or download data in other systems. In this mode, the player can do any normal operations at the same time.

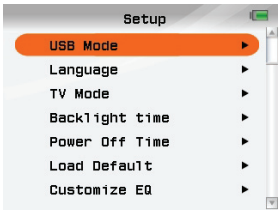

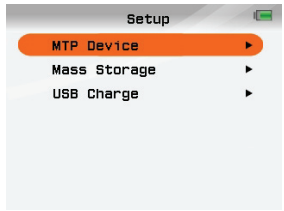

4.2 Language

Eleven languages are available: English, Simplified and Traditional Chinese, Dutch, German, Spanish, French, Italian, Portuguese, Thai, and Russian.

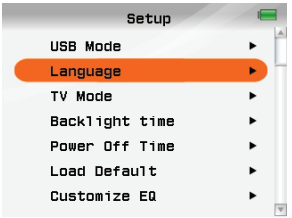

4.3 TV Mode

The player can be set to display on TV (NTSC or PAL system). The light of LCD will be off when connecting to TV.

The player can connect to TV by using the TV Hot-Key .

Keep press for 5 seconds and release, the display will toggle between LCD and TV.

Please refer to Chapter 1.3 and 2.4 for detail connection descriptions.

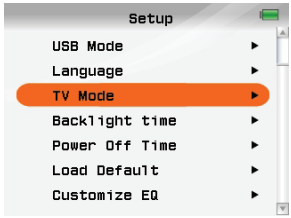

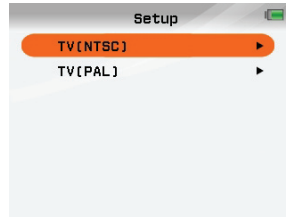

4.4 Backlight Time

You can set the backlight duration. After setting the backlight time, if no buttons are pressed, the backlight will automatically turn off in order to save the battery power.

The selections are 10 / 15 / 20 / 60 seconds and Always ON.

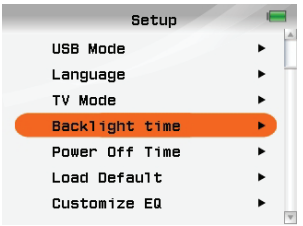

4.5 Power Off Time

This is usually used in the music playing mode. After setting, if buttons are not pressed when playing music, the player will automatically turn off according to setting time.

The selections are OFF, 10 minutes, 30 minutes, 1 hour, and 2 hours.

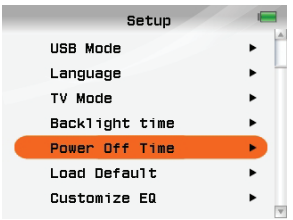

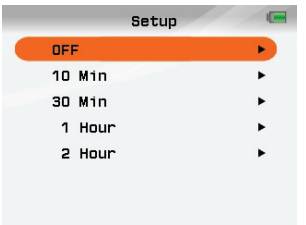

4.6 Load Default

Default Settings: Initialize the system settings which you define to return to the default setting.

Warning:
Press Clear All button, it may delete all stored files in the player.

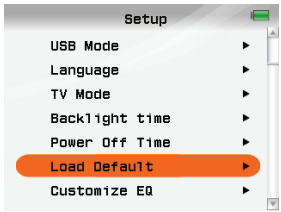

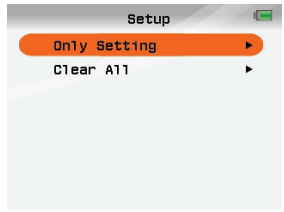

4.7 Customize EQ

To set the customize EQ, press ⏯ or ▶ to enter the EQ setting diagrams.

Use ▲ and ▼ to identify the frequency and then use ▶ and ◀ to adjust. Press ↩ to go back to the Setting menu.

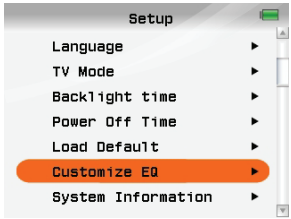

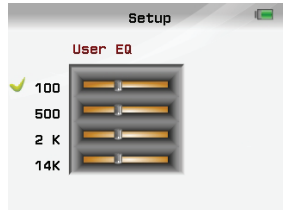

4.8 System Information

The software version and the memory status can be viewed in the system information.

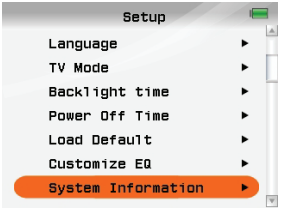

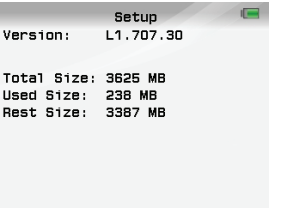

Chapter 5: OTHERS

5.1 Menus

Menu One
In the main menu mode, press the ↺ to access Lock commands. Press ⏯ to lock the player.

To unlock the player, press ↺ and choose unlock and then press ⏯ to release the lock.

Menu Two
In any submenu, press the ↺ to access Menu or Lock commands.

Menu Three
In the submenu of file list, press ↺ to access commands including: mark all, mark, delete, pmenu and lock.

5.2 Using Windows Media Player 10/11

1. If your computer has never used Windows Media Player, please go to the Microsoft official website to download Windows Media 10 or above.
2. After downloading, please follow the instructions to install.
3. After installing successfully, you can click [start synchronize] to start transfer the music, video and photo files to the player.
4. For the first time connecting the player to the computer, the player

may be considered as a Media Player. Please uninstall the Media Player device first.

5.3 Using MP4 Maker to convert video formats

1. Install the MP4 Maker converter tool first
2. After installing successfully, click MP4 Maker to run the program
3. After setting, select the file(s) and press Convert to convert files.

If conversion is successful, copy the converted files to the player.

5.4 Low Battery

If the player is in low battery status, the system will prompt Low Battery Shutting Down….., and, the system will shut down automatically after 5 seconds.

Please recharge the player in time. The player supports USB power supply, which can be used while playing.

5.5 Certifications, Liability, and Trademarks

Certifications

The player is CE and FCC certified and compliant with RoHS requirement.

Limited Liability

The manufacturer or dealer is NOT responsible for any accidental damage including bodily injury resulting from misuse or improper operation by user

Trademark

Windows Media Player 10/11 and Windows 98/2000/ME/XP/VISTA are registered trademarks of Microsoft Corporation in the United States and/or other countries.

All other trademarks are the property of their respective owners.

SingMaxx is a registered trademark of XCUBE Technology Inc. in Taiwan and/or other countries.

5.6 Troubleshooting

- The player will not power on
  - Check whether the player is discharged.
  - Reset the player (refer to Chapter 2.8)

- The player will not enter main menu
  - Reset the player (refer to Chapter 2.8)
  - Connecting to computer through USB cable to check whether the player is working

- No response when the player is connected to your computer using USB cable
  - Check whether the USB cable is firmly connected
  - Check whether the USB cable is 2.0 version
  - Unplug the USB cable and plug it into your computer again

- The screen goes off
  - Check the Setting>Backlight Time
  - Check whether the player is discharged

- Other
  - For any other operating questions, please visit www.singmaxx.com . Fill out and mail the support request form, technicians will offer support.